



Print areas

		mm	Inch	Print	Notes
A	Button (right)	30 × 4	1,18 × 0,16	1 colour	-
B	Clip	40 × 8	1,57 × 0,31	6 colours	-
C	Button (left)	30 × 4	1,18 × 0,16	1 colour	-
D	Back cap	40 × 5	1,57 × 0,20	1 colour	-
E	Body	30 × 28	1,18 × 1,10	4 colours	-